

Fingering system for folk flutes, fifes, and whistles

	G ₅	A ₅	B ₅	C ₆	D ₆	E ₆	F ₆	F [♯] ₆	G ₆	A ₆	B ₇	C ₇	D ₇	E ₇	F [♯] ₇	G ₇
Sopranino	G ₅	A ₅	B ₅	C ₆	D ₆	E ₆	F ₆	F [♯] ₆	G ₆	A ₆	B ₇	C ₇	D ₇	E ₇	F [♯] ₇	G ₇
Soprano	D ₅	E ₅	F [♯] ₅	G ₅	A ₅	B ₅	C ₆	C [♯] ₆	D ₆	E ₆	F [♯] ₆	G ₆	A ₆	B ₆	C [♯] ₇	D ₇
Alto	G ₄	A ₄	B ₄	C ₅	D ₅	E ₅	F ₅	F [♯] ₅	G ₅	A ₅	B ₅	C ₆	D ₆	E ₆	F [♯] ₆	G ₆
Tenor	D ₄	E ₄	F [♯] ₄	G ₄	A ₄	B ₄	C ₅	C [♯] ₅	D ₅	E ₅	F [♯] ₅	G ₅	A ₅	B ₅	C [♯] ₆	D ₆
	●	●	●	●	●	●	○	○	○	●	●	●	●	●	○	○
	●	●	●	●	●	○	●	○	●	●	●	●	●	○	○	●
	●	●	●	●	○	○	●	○	●	●	●	●	○	○	○	●
	●	●	●	○	○	○	○	○	●	●	●	○	○	○	○	●
	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	●	○	○	○	○	○	○	○	●	○	○	○	○	○	○	●