

BATEM Core Quick Reference Guide

BATEM terminal (`baterm`)

Start: `baterm` or `python -m batem.baterm` (from repo root after editable install).

| Manual | `doc/Baterm_User_Manual.md` · in shell: `help baterm` |

| Required data | `doc/Building_Data_Required.md` (`ContextData` + `BuildingData`) |

| Package README | `batem/baterm/README.md` |

Task	Command
Session snapshot	<code>status</code>
Clear session	<code>clear</code> (context + building + PV)
Open baterm manual	<code>manual</code> → <code>doc/Baterm_User_Manual.md</code>

This quick reference provides common usage patterns. For the interactive shell see [Baterm_User_Manual.md](#); for API details see [API_DOCUMENTATION.md](#).