

Accessing the Rako Bridge from an external application.



Name	
Parameter	
Description	
Example	
Example Description	

Name	
Parameter	
Description	
Example	
Example Description	

 
Name	
Parameter	
Description	Room and Channel parameters required.
Example	
Example Description	

 
Name	
Parameter	
Description	Room and Channel parameters required.
Example	
Example Description	

Name	
Parameter	
Description	Room and Channel parameters required.
Example	
Example Description	

Name	
Parameter	
Description	'run' parameter required with value 1
Example	
Example Description	

Name	
Parameter	
Description	'run' parameter required with value 1
Example	
Example Description	





Byte 1								Byte 2							
B7	B6	B5	B4	B3	B2	B1	B0	B7	B6	B5	B4	B3	B2	B1	B0

0x04041006

Direction	Parameters			Example
	Byte	Bit	Function	
			0x44	0x44

Direction	Broadcast Reply From Bridge

Direction	Parameters			Example
	Byte	Bit	Function	
			0x51	0x5101
			0x01 0x20 0x21	0x5121

Direction	Parameters			Example
	Byte	Bit	Function	
			0x43	0x4301FF 0x43030C1CD5 0x43050C1C040CC3

Direction	Parameters			Example
	Byte	Bit	Function	
			0x58	0x58 04 80 49 01 ff bf 7f 3f 00 00 00 00 00 00 00 00 00 00 00 00 00 04 80 49 02 ff bf 7f 3f 00 00 00 00 00 00 00 00 00 00 00 00 00
			0x04	

Direction	Parameters			Example
	Byte	Bit	Function	
			0x58	0x4301FF
			0xFF	

[illegible]

0x53

Direction	Parameters			Example
	Byte	Bit	Function	
			0x53	0x530A00050031 0104000000C5
				0x530A0064003101 0300000067

Command	Name	Description	Data 0	Data 1
	OFF			
	FADE_UP			
	FADE_DOWN			
	SC1			
	SC2			
	SC3			
	SC4			
	IDENT			
	LEVEL_SET			
	STORE			

