


# Programmer's Guide

## JETI Software Development Kit jeti\_radio\_ex.dll

Version 4.x

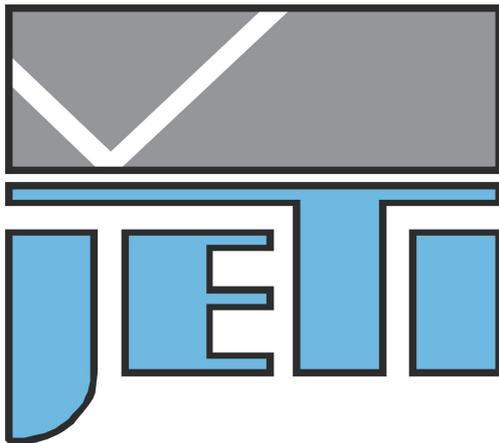

**JETI Technische Instrumente GmbH**  
**Tatzendpromenade 2**

**D-07745 Jena**

**Tel.: +49-3641-225680**

**Fax: +49-3641-225681**

**e-mail: [sales@jeti.com](mailto:sales@jeti.com)**

**internet: [www.jeti.com](http://www.jeti.com)**

# Table of contents

<b>1 JETI SDK Overview.....</b>	<b>3</b>
<b>2 Introduction.....</b>	<b>4</b>
2.1 HOW TO COMMUNICATE	4
<b>3 Function Reference.....</b>	<b>5</b>
3.1 JETI_GETRADIOEXDLLVERSION	6
3.2 JETI_GETNUMRADIOEX	7
3.3 JETI_GETSERIALRADIOEX	8
3.4 JETI_OPENRADIOEX	9
3.5 JETI_CLOSERADIOEX	10
3.6 JETI_MEASUREEX	11
3.7 JETI_PREPAREMEASUREEX	12
3.8 JETI_MEASURESTATUSEX	13
3.9 JETI_MEASUREBREAKEX	14
3.10 JETI_SPECRADEX15	
3.11 JETI_SAVESPECRADSPCEX	16
3.12 JETI_SAVESPECRADCSVEX	17
3.13 JETI_RADIOEX	18
3.14 JETI_PHOTOEX	19
3.15 JETI_CHROMXYEX20	
3.16 JETI_CHROMXY10EX	21
3.17 JETI_CHROMUVEX22	
3.18 JETI_CHROMXYZEX	23
3.19 JETI_DWLPEEX24	
3.20 JETI_CCTEX	25
3.21 JETI_DUVEX	26
3.22 JETI_CRIEX	27
3.23 JETI_RADIOTINTEX	28
3.24 JETI_SETMEASDISTEX	29
3.25 JETI_GETMEASDISTEX	30
<b>4 Examples.....</b>	<b>31</b>
4.1 C EXAMPLES	31
4.2 LABVIEW EXAMPLES	31
4.3 VISUALBASIC / VBA EXAMPLES	31
<b>Appendix A.....</b>	<b>32</b>
<b>5 Service.....</b>	<b>33</b>

# 1 JETI SDK Overview

The JETI Software Development Kit provides a complete software solution for interfacing spectrometric and radiometric devices from JETI Technische Instrumente GmbH. No firmware command expertise is required. Instead, a simple, high-level Application Program Interface (API) is used to provide complete connectivity. The API is provided in the form of several Windows Dynamic Link Libraries (DLL). The libraries can be used by any programming language that can handle DLL's such C/C++, VisualBasic, or LabVIEW. To get access to the functions the needed DLL files have to be copied to the Windows System Folder or to the working directory of the calling application.

The following DLLs are available:

- jeti\_spectro.dll / jeti\_spectro64.dll
  - provides a set of functions for simple spectrometric measurement
- jeti\_spectro\_ex.dll / jeti\_spectro\_ex64.dll
  - a set of functions like jeti\_spectro.dll, but with more options to control the measurement
- jeti\_radio.dll / jeti\_radio64.dll
  - provides a set of functions for simple radiometric measurement, including calculation of colorimetric values (e.g. xy- and u'v'-values, CCT, CRI,...)
- jeti\_radio\_ex.dll / jeti\_radio\_ex64.dll
  - a set of functions like jeti\_radio.dll, but with more options to control the measurement and calculations
- jeti\_core.dll / jeti\_core64.dll
  - a set of functions to fully control the device and perform custom measurement sequences

***Please note that this documentation describes only the functions provided by the jeti\_radio\_ex.dll. For description of the other DLL's please refer to the corresponding documents.***

## 2 Introduction

The `jeti_radio_ex` API is provided in the form of a Windows Dynamic Link Library (DLL). The interface DLL communicates with the device via the provided device driver and the basic driver DLL `jeti_core.dll`.

JETI Technische Instrumente GmbH offers two versions of the DLL. The first version is for 32bit Windows operating systems (Windows 7/8/8.1/10).

The second version is for real 64 bit programs under the 64 bit versions of Windows 7/8/8.1/10.

There are no differences in the functionality between the two versions.

### 2.1 How to communicate

To get access to the functions you have to copy the files `jeti_radio_ex.dll` and `jeti_core.dll` to the working directory of your application, or to the `windows\system32` directory.

In general, the user initiates communication with the target device(s) by making a call to [\*JETI\\_GetNumRadioEx\*](#). This call will return the number of target devices. This number is then used as a range when calling [\*JETI\\_GetSerialRadioEx\*](#) to build a list of device serial numbers.

To access a device, it must first be opened by a call to [\*JETI\\_OpenRadioEx\*](#) using an index determined from the call to [\*JETI\\_GetNumRadioEx\*](#). The [\*JETI\\_OpenRadioEx\*](#) function will return a handle to the device that is used in all subsequent accesses. When I/O operations are complete, the device is closed by a call to [\*JETI\\_CloseRadioEx\*](#).

In case of a fatal communication error (error code 0xFF) `JETI_HardReset` (from `jeti_core.dll`) could be used to reset the device and resume the communication. For more information see the function description of `JETI_HardReset` in 'JETI SDK Programmer's Guide `jeti_core.dll`' and the Appendix A.

### 3 Function Reference

Convention for calling : `__stdcall`

Type	Size in Bit	Minimum	Maximum
DWORD (unsigned long)	32	0	$2^{32}-1$
DWORD_PTR (unsigned long integer) (unsigned long long)	32 (32bit DLLs) 64 (64bit DLLs)	0 0	$2^{32}-1$ $2^{64}-1$
WORD (unsigned short integer)	16	0	65535
FLOAT (IEEE standard)	32	-3.40282E+38	3.40282E+38
BOOL (integer)	32	$-2^{21}$	$2^{31}-1$

### 3.1 JETI\_GetRadioExDLLVersion

This function returns the current version number of the jeti\_radio\_ex DLL.

#### Prototype

DWORD JETI\_GetRadioExDLLVersion (WORD \*wMajorVersion, WORD \*wMinorVersion, WORD \*wBuildNumber)

#### Parameters

##### Input

Name	Type	Description	Call
wMajorVersion	WORD *	address of a WORD variable that will contain the major version	By reference
wMinorVersion	WORD *	address of a WORD variable that will contain the minor version	By reference
wBuildNumber	WORD *	address of a WORD variable that will contain the build number	By reference

##### Return Value

Type	Description
DWORD	0x00 0x...
	JETI_SUCCESS see Appendix A for error codes

## 3.2 JETI\_GetNumRadioEx

This function returns the number of JETI devices connected to the PC or to the LAN.

### Prototype

DWORD JETI\_GetNumRadioEx (DWORD \*dwNumDevices)

### Parameters

#### Input

Name	Type	Description	Call
dwNumDevices	DWORD *	address of a DWORD variable that will contain the number of devices connected	By reference

#### Return Value

Type	Description
DWORD	0x00 JETI_SUCCESS 0x... see Appendix A for error codes

### 3.3 JETI\_GetSerialRadioEx

This function returns the serial numbers for the device specified by an index passed in dwDeviceNum. The index for the first device is 0 and the last device is the value returned by [JETI\\_GetNumRadioEx](#) – 1.

#### Prototype

DWORD JETI\_GetSerialRadioEx (DWORD dwDeviceNum, char \*cBoardSerialNr, char \*cSpecSerialNr, char \*cDeviceSerialNr)

#### Parameters

##### Input

Name	Type	Description	Call
dwDeviceNum	DWORD	index of the device for which the serial numbers are desired	By value
cBoardSerialNr	char *	address of a string that will contain the electronics serial number	By reference
cSpecSerialNr	char *	address of a string that will contain the spectrometer serial number	By reference
cDeviceSerialNr	char *	address of a string that will contain the device serial number	By reference

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

### 3.4 JETI\_OpenRadioEx

Opens a device (using device number returned by *JETI\_GetNumRadioEx*) and returns a handle which will be used for subsequent accesses.

#### Prototype

DWORD JETI\_OpenRadioEx (DWORD dwDeviceNum, DWORD\_PTR \*dwDevice)

#### Parameters

##### Input

Name	Type	Description	Call
dwDeviceNum	DWORD	Device index. 0 for first device, 1 for second, etc.	By value
dwDevice	DWORD_PTR *	Pointer to a variable where the handle to the device will be stored	By reference

##### Return Value

Type	Description
DWORD	0x00 JETI_SUCCESS 0x... see Appendix A for error codes

### 3.5 JETI\_CloseRadioEx

Closes an open device using the handle provided by [JETI\\_OpenRadioEx](#).

#### Prototype

DWORD JETI\_CloseRadioEx (DWORD\_PTR dwDevice)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device to close as returned by <a href="#">JETI_OpenRadioEx</a>	By value

##### Return Value

Type	Description
DWORD	0x00 JETI_SUCCESS 0x... see Appendix A for error codes

### 3.6 JETI\_MeasureEx

Starts a radiometric measurement.

The integration time will be determined automatically if fTint is set to zero (0). Otherwise the integration time in milliseconds will be used.

To perform an average measurement with up to 10000 measurements set the wAver to the appropriate value, otherwise set the value to 1.

All further calculations will be performed using the wavelength resolution as specified by the dwStep value. A value of 1 or 5 nm is allowed.

**NOTE:** The function will return *immediately*. Before any other DLL-function call the function [JETI\\_MeasureStatusEx](#) must be used to check if the measurement has finished. **Please note that a measurement could take several seconds up to 2 minutes, depending on the intensity of the light source to measure. If averaging is used, the time increases proportional with the count.**

#### Prototype

DWORD JETI\_MeasureEx (DWORD\_PTR dwDevice, float fTint, WORD wAver, DWORD dwStep)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fTint	float	Integration time in [ms] for the measurement (up to 60000). Set this value to 0 for adaption.	By value
wAver	WORD	Count of scans for averaging. Set this value to 1 for no averaging	By value
dwStep	DWORD	wavelength step in [nm] for further calculations	By value

##### Return Value

Type	Description
DWORD	0x00 JETI_SUCCESS 0x... see Appendix A for error codes

### 3.7 JETI\_PrepareMeasureEx

Prepares a radiometric measurement.

The integration time will be determined automatically if fTint is set to zero (0). Otherwise the integration time in milliseconds will be used.

To perform an average measurement with up to 10000 measurements set the wAver to the appropriate value, otherwise set the value to 1.

All further calculations will be performed using the wavelength resolution as specified by the dwStep value. A value of 1 or 5 nm is allowed.

It will not start the measurement.

**NOTE:** The function will return *immediately*. Before any other DLL-function call the function [JETI\\_MeasureStatusEx](#) must be used to check if the measurement has started by an external trigger.  
**Please note that a measurement could take several seconds up to 2 minutes, depending on the intensity of the light source to measure. If averaging is used, the time increases proportional with the count.**

#### Prototype

DWORD JETI\_PrepareMeasureEx (DWORD\_PTR dwDevice, float fTint, WORD wAver, DWORD dwStep)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fTint	float	Integration time in [ms] for the measurement (up to 60000). Set this value to 0 for adaption.	By value
wAver	WORD	Count of scans for averaging. Set this value to 1 for no averaging	By value
dwStep	DWORD	wavelength step in [nm] for further calculations	By value

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

### 3.8 JETI\_MeasureStatusEx

Returns the status of a measurement started with *JETI\_MeasureEx*. A measurement has finished if the boStatus variable is FALSE (0). If the measurement is already in progress the variable boStatus returns TRUE (1).

If a measurement was initiated with automatic adaption of integration time and the measurement could not be performed because of overexposure boStatus will be switched to FALSE (0) and the function will return an error code 0x20.

**NOTE:** A function to get a measuring result should not be called until the *JETI\_MeasureStatusEx* returns that the measurement has finished.

#### Prototype

DWORD JETI\_MeasureStatusEx (DWORD\_PTR dwDevice, BOOL \*boStatus)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
boStatus	BOOL *	Pointer to a variable where the status will be stored TRUE (1) – in progress FALSE (0) – ready	By reference

##### Return Value

Type	Description
DWORD	JETI_SUCCESS
0x00	see Appendix A for error codes
0x...	

### 3.9 JETI\_MeasureBreakEx

This function cancels an initiated measurement.

#### Prototype

DWORD JETI\_MeasureBreakEx (DWORD\_PTR dwDevice)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value

##### Return Value

Type	Description
DWORD	0x00 0x... JETI_SUCCESS see Appendix A for error codes

### 3.10 JETI\_SpecRadEx

Returns the spectral radiance per wavelength. The wavelength range in [nm] is specified by dwBeg and dwEnd. The wavelength step was specified by the function [JETI\\_MeasureEx](#).

Please note that the array for the values must provide enough space for at least the count of calculated values! The count of values can be obtained by subtract the start wavelength (dwBeg) from the end wavelength (dwEnd), divide the result by the wavelength step and increase the result by 1:

$$count = \frac{dwEnd - dwBeg}{dwStep} + 1$$

The unit of the values depends on the used measuring head. By default it's as follows:

<b>Measuring Head</b>	<b>Description</b>	<b>Unit</b>
none	spectral radiance	$W / sr \times m^2 \times nm$
cosine corrector head-piece	spectral irradiance	$W / m^2 \times nm$
integrating sphere	spectral radiant flux	$W / nm$
tube	spectral radiant intensity	$W / sr \times nm$

#### Prototype

DWORD JETI\_SpecRadEx (DWORD\_PTR dwDevice, DWORD dwBeg, DWORD dwEnd, FLOAT \*fSprad)

#### Parameters

##### Input

<b>Name</b>	<b>Type</b>	<b>Description</b>	<b>Call</b>
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
dwBeg	DWORD	start wavelength in [nm]	By value
dwEnd	DWORD	end wavelength in [nm]	By value
fSprad	FLOAT *	Pointer to an array where the spectral radiance values will be stored <b>(the array must provide space for at least 81 values)</b>	By reference

##### Return Value

<b>Type</b>	<b>Description</b>
DWORD	0x00 JETI_SUCCESS 0x.. see Appendix A for error codes

### 3.11 JETI\_SaveSpecRadSPCEX

Writes the spectral radiance per wavelength to a SPC-file. The wavelength range in [nm] is specified by dwBeg and dwEnd. The wavelength step was specified by the function [JETI\\_MeasureEx](#).

The unit of the values depends on the used measuring head. By default it's as follows:

<b>Measuring Head</b>	<b>Description</b>	<b>Unit</b>
none	spectral radiance	$W / sr \times m^2 \times nm$
cosine corrector head-piece	spectral irradiance	$W / m^2 \times nm$
integrating sphere	spectral radiant flux	$W / nm$
tube	spectral radiant intensity	$W / sr \times nm$

#### Prototype

DWORD JETI\_SaveSpecRadSPCEX (DWORD\_PTR dwDevice, DWORD dwBeg, DWORD dwEnd, char \*cPathName, char \*cOperator, char \*cMemo)

#### Parameters

##### Input

<b>Name</b>	<b>Type</b>	<b>Description</b>	<b>Call</b>
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
dwBeg	DWORD	start wavelength in [nm]	By value
dwEnd	DWORD	end wavelength in [nm]	By value
cPathName	char *	String (up to 255 character) with file name and directory to save the file (file extension should be .SPC)	By reference
cOperator	char *	String (up to 63 character) with operator's name	By reference
cMemo	char *	String (up to 129 character) with a measurement description	By Reference

##### Return Value

<b>Type</b>	<b>Description</b>
DWORD	0x00 0x..
	JETI_SUCCESS see Appendix A for error codes

### 3.12 JETI\_SaveSpecRadCSVEx

Writes the spectral radiance per wavelength to a CSV-file. The wavelength range in [nm] is specified by dwBeg and dwEnd. The wavelength step was specified by the function [JETI\\_MeasureEx](#).

The unit of the values depends on the used measuring head. By default it's as follows:

<b>Measuring Head</b>	<b>Description</b>	<b>Unit</b>
none	spectral radiance	$W / (sr \times m^2 \times nm)$
cosine corrector head-piece	spectral irradiance	$W / m^2 \times nm$
integrating sphere	spectral radiant flux	$W / nm$
tube	spectral radiant intensity	$W / (sr \times nm)$

#### Prototype

DWORD JETI\_SaveSpecRadCSVEx (DWORD\_PTR dwDevice, DWORD dwBeg, DWORD dwEnd, char \*cPathName, char \*cOperator, char \*cMemo)

#### Parameters

##### Input

<b>Name</b>	<b>Type</b>	<b>Description</b>	<b>Call</b>
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
dwBeg	DWORD	start wavelength in [nm]	By value
dwEnd	DWORD	end wavelength in [nm]	By value
cPathName	char *	String (up to 255 character) with file name and directory to save the file (file extension should be .CSV)	By reference
cOperator	char *	String (up to 63 character) with operator's name	By reference
cMemo	char *	String (up to 129 character) with a measurement description	By Reference

##### Return Value

<b>Type</b>	<b>Description</b>
DWORD	0x00 0x..
	JETI_SUCCESS see Appendix A for error codes

### 3.13 JETI\_RadioEx

Returns the radiometric value determined by the last measure. The wavelength range in [nm] is specified by dwBeg and dwEnd. The wavelength step was specified by the function [JETI\\_MeasureEx](#).

The unit of the value depends on the used measuring head. By default it's as follows:

<b>Measuring Head</b>	<b>Description</b>	<b>Unit</b>
none	radiance	$W / (sr \times m^2)$
cosine corrector head-piece	irradiance	$W / m^2$
integrating sphere	radiant flux	$W$
tube	radiant intensity	$W / sr$

#### Prototype

DWORD JETI\_Radio (DWORD\_PTR dwDevice, DWORD dwBeg, DWORD dwEnd, FLOAT \*fRadio)

#### Parameters

##### Input

<b>Name</b>	<b>Type</b>	<b>Description</b>	<b>Call</b>
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
dwBeg	DWORD	start wavelength in [nm]	By value
dwEnd	DWORD	end wavelength in [nm]	By value
fRadio	FLOAT *	Pointer to a variable where the radiometric value will be stored	By reference

##### Return Value

<b>Type</b>	<b>Description</b>
DWORD	0x00 JETI_SUCCESS 0x... see Appendix A for error codes

### 3.14 JETI\_PhotoEx

Returns the photometric value determined by the last measure. The wavelength range for calculation is 380...780 nm. The wavelength step was specified by the function [JETI\\_MeasureEx](#).

The unit of the value depends on the used measuring head. By default it's as follows:

<b>Measuring Head</b>	<b>Description</b>	<b>Unit</b>
none	luminance	$cd/m^2$
cosine corrector head-piece	illuminance	$lx$
integrating sphere	luminous flux	$lm$
tube	luminous intensity	$cd$

#### Prototype

DWORD JETI\_Photo (DWORD\_PTR dwDevice, FLOAT \*fPhoto)

#### Parameters

##### Input

<b>Name</b>	<b>Type</b>	<b>Description</b>	<b>Call</b>
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fPhoto	FLOAT *	Pointer to a variable where the photometric value will be stored	By reference

##### Return Value

<b>Type</b>	<b>Description</b>
DWORD	0x00 JETI_SUCCESS 0x... see Appendix A for error codes

### 3.15 JETI\_ChromxyEx

Returns the CIE-1931 chromaticity coordinates x and y determined by the last measure. The calculation is based on a 2° observer, and the wavelength range for calculation is 380...780 nm.

#### Prototype

DWORD JETI\_ChromxyEx ( DWORD\_PTR dwDevice, FLOAT \*fChromx, FLOAT \*fChromy)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fChromx	FLOAT *	Pointer to a variable where the x-value will be stored	By reference
fChromy	FLOAT *	Pointer to a variable where the y-value will be stored	By reference

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

### 3.16 JETI\_Chromxy10Ex

Returns the CIE-1931 chromaticity coordinates x and y determined by the last measure. The calculation is based on a 10° observer, and the wavelength range for calculation is 380...780 nm.

#### Prototype

DWORD JETI\_Chromxy10Ex ( DWORD\_PTR dwDevice, FLOAT \*fChromx10, FLOAT \*fChromy10)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fChromx10	FLOAT *	Pointer to a variable where the x-value will be stored	By reference
fChromy10	FLOAT *	Pointer to a variable where the y-value will be stored	By reference

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

### 3.17 JETI\_ChromuvEx

Returns the CIE-1976 chromaticity coordinates  $u'$  and  $v'$  determined by the last measure. The calculation is based on a  $2^\circ$  observer, and the wavelength range for calculation is 380...780 nm.

#### Prototype

DWORD JETI\_ChromuvEx ( DWORD\_PTR dwDevice, FLOAT \*fChromu, FLOAT \*fChromv)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fChromu	FLOAT *	Pointer to a variable where the $u'$ -value will be stored	By reference
fChromv	FLOAT *	Pointer to a variable where the $v'$ -value will be stored	By reference

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

### 3.18 JETI\_ChromXYZEx

Returns the tristimulus XYZ determined by the last measure. The calculation is based on a 2° observer, and the wavelength range for calculation is 380...780 nm.

#### Prototype

DWORD JETI\_ChromXYZEx (DWORD\_PTR dwDevice, FLOAT \*fX, FLOAT \*fY, FLOAT \*fZ)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fX	FLOAT *	pointer to a variable where the tristimulus X will be stored	By reference
fY	FLOAT *	pointer to a variable where the tristimulus Y will be stored	By reference
fZ	FLOAT *	pointer to a variable where the tristimulus Z will be stored	By reference

##### Return Value

Type	Description
DWORD	0x00 0x... JETI_SUCCESS see Appendix A for error codes

### 3.19 JETI\_DWLPEEx

Returns the dominant wavelength (DWL) and color purity (PE) determined by the last measure. The calculation is based on a 2° observer, and the wavelength range for calculation is 380...780 nm.

The unit for the dominant wavelength is [nm].

The unit for the color purity is [%] (percent).

#### Prototype

DWORD JETI\_DWLPEEx (DWORD\_PTR dwDevice, FLOAT \*fDWL, FLOAT \*fPE)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fDWL	FLOAT *	Pointer to a variable where the dominant wavelength will be stored	By reference
fPE	FLOAT *	Pointer to a variable where the color purity will be stored	By reference

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

## 3.20 JETI\_CCTEx

Returns the correlated color temperature (CCT) determined by the last measure. The wavelength range for calculation is 380...780 nm.

### Prototype

DWORD JETI\_CCTEx (DWORD\_PTR dwDevice, float \*fCCT)

### Parameters

#### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fCCT	float *	Pointer to a variable where the correlated color temperature value will be stored	By reference

#### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

### 3.21 JETI\_DuvEx

Returns the  $\Delta uv$  for the correlated color temperature (CCT) determined by the last measure. The wavelength range for calculation is 380...780 nm.

#### Prototype

DWORD JETI\_DuvEx (DWORD\_PTR dwDevice, FLOAT \*fDuv)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fDuv	FLOAT *	pointer to a variable where the $\Delta uv$ value will be stored	By reference

##### Return Value

Type	Description
DWORD	0x00 JETI_SUCCESS 0x... see Appendix A for error codes

### 3.22 JETI\_CRIEx

Returns the color rendering indices according to CIE 13.3-1995 publication and the color rendering index of the JIS color sample determined by the last measure.

The color temperature of the reference source is specified by fCCT. To use the same CCT as calculated, set fCCT to zero (0).

The function returns an array of 17 values containing the different CRI-values.

The first value (index 0) contains the chromaticity difference (DC) between the lamp to be tested and the reference illuminant. If DC is greater than 0.0054 the resulting color rendering indices may become less accurate.

The second value (index 1) contains the general color rendering index which is the arithmetical mean of eight special color rendering indices for the CIE-1974 test-color samples Nos. 1...8.

Value number three (index 2) to value number 17 (index 16) contains the special color rendering indices.

#### Prototype

DWORD JETI\_CRIEx (DWORD\_PTR dwDevice, float fCCT, float \*fCRI)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
fCCT	float	color temperature of the reference light source in [K]	By value
fCRI	float *	Pointer to an array where the CRI-values will be stored <b>(the array must provide space for at least 17 values)</b>	By reference

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

### 3.23 JETI\_RadioTintEx

This function gets the last used integration time.

#### Prototype

DWORD JETI\_RadioTintEx (DWORD\_PTR dwDevice, float \*fTint)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <i>Fehler: Referenz nicht gefunden</i>	By value
fTint	float *	Pointer to a variable where the integration time will be stored	By reference

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

### 3.24 JETI\_SetMeasDistEx

This function sets the measuring distance which is used to calculate the values in intensity measuring mode.

#### Prototype

DWORD JETI\_SetMeasDistEx (DWORD\_PTR dwDevice, DWORD dwDistance)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
dwDistance	DWORD	the measuring distance in [mm]	By value

##### Return Value

Type	Description
DWORD	0x00 JETI_SUCCESS 0x... see Appendix A for error codes

### 3.25 JETI\_GetMeasDistEx

This function gets the measuring distance which is used to calculate the values in intensity measuring mode.

#### Prototype

DWORD JETI\_GetMeasDistEx (DWORD\_PTR dwDevice, DWORD \*dwDistance)

#### Parameters

##### Input

Name	Type	Description	Call
dwDevice	DWORD_PTR	Handle to a device as returned by <a href="#">JETI_OpenRadioEx</a>	By value
dwDistance	DWORD *	pointer to a variable where the measuring distance in [mm] will be stored	By value

##### Return Value

Type	Description
DWORD	0x00 0x... see Appendix A for error codes

## 4 Examples

To help starting development the SDK includes several examples.

### 4.1 C Examples

#### RadioSample

This sample demonstrates the basic usage of the jeti\_radio DLL.

#### SyncSample

The SyncSample demonstrates the use of special functions to synchronize the measurements integration time with the frequency of pulsed light sources and pulsed monitor back-lights.

#### TriggerSample

This sample demonstrates the handle of measurements initiated by an external trigger event.

### 4.2 LabVIEW Examples

These samples demonstrate the basic usage of the DLLs within a LabVIEW program.

### 4.3 VisualBasic / VBA Examples

These sample demonstrate the usage of the jeti\_radio DLL within a VBA macro inside an excel spreadsheet.

## Appendix A

### Error codes and their description:

<b>Error code</b>	<b>#define</b>	<b>Description</b>
0x00	JETI_SUCCESS	no error occurred
0x02	JETI_ERROR_OPEN_PORT	could not open COM-port
0x03	JETI_ERROR_PORT_SETTING	could not set COM-port settings
0x04	JETI_ERROR_BUFFER_SIZE	could not set buffer size of COM-port
0x05	JETI_ERROR_PURGE	could not purge buffers of COM-port
0x06	JETI_ERROR_TIMEOUT_SETTING	could not set COM-port timeout
0x07	JETI_ERROR_SEND	could not send to device
0x08	JETI_TIMEOUT	communication timeout error
0x0A	JETI_ERROR_RECEIVE	could not receive from device
0x0B	JETI_ERROR_NAK	command not supported or invalid argument
0x0C	JETI_ERROR_CONVERT	could not convert received data
0x0D	JETI_ERROR_PARAMETER	invalid argument
0x0E	JETI_BUSY	device busy
0x11	JETI_CHECKSUM_ERROR	invalid checksum of received data
0x12	JETI_INVALID_STEPWIDTH	invalid step width
0x13	JETI_INVALID_NUMBER	invalid device number
0x14	JETI_NOT_CONNECTED	device not connected
0x15	JETI_INVALID_HANDLE	invalid device handle
0x16	JETI_INVALID_CALIB	invalid calibration file number
0x17	JETI_CALIB_NOT_READ	calibration data not read
0x20	JETI_OVEREXPOSURE	measurement failed due to overexposure
0x22	JETI_MEASURE_FAIL	measurement failed due to other reasons
0x23	JETI_ADAPTION_FAIL	adaption failed
0x80	JETI_DLL_ERROR	internal DLL error
0xFF	JETI_FATAL_ERROR	fatal communication error
0x2710...0x2AFC		Windows sockets error codes

If a fatal communication error occurs (error code 0xFF) there are several ways to solve the problem.

- 1) Call `JETI_HardReset` (from `jeti_core`) to perform a device hardware reset. The effect of this function is the same as disconnecting then reconnecting the device from USB. This will work only if the device uses an FTDI USB-to-serial converter and was opened with direct access to the FTDI driver (opened with `JETI_GetNumRadioEx` and `JETI_OpenRadioEx`) instead of using the VCP (virtual com port) driver (`JETI_OpenCOMDevice` and/or `JETI_SetComSearch`). Please note that all custom settings (e.g. integration time, function,...) will be set to default values and have to be repeated.
- 2) Closing the device with `JETI_CloseRadioEx` will also perform a hardware reset if a fatal communication error occurred on a device with FTDI USB-to-Serial converter. After closing the device it should be possible to reopen the device with `JETI_GetNumRadioEx` and `JETI_OpenRadioEx`.
- 3) If a JETI device with FTDI USB-to-Serial converter was opened using VCP driver (e.g. by using `JETI_OpenCOMDevice`) or by using other connections (like RS232, bluetooth,...) a fatal communication error can only be resolved by closing the device with `JETI_CloseRadioEx` and manually reset the device.

## 5 Service

In case of any questions or technical problems please contact:

JETI Technische Instrumente GmbH Tatzendpromenade 2 D-07745 Jena Tel. +49 3641 225 680 Fax +49 3641 225 681 e-mail: sales@jeti.com Internet: www.jeti.com
---

Copyright (c) 2016 JETI Technische Instrumente GmbH. All rights reserved.

Software and operating instruction are delivered with respect to the License agreement and can be used only in accordance with this License agreement.

The hard and software as well as the operating instruction are subject to change without notice. JETI Technische Instrumente GmbH assumes no liability or responsibility for inaccuracies and errors in the operating instruction.

It is not allowed to copy this documentation or parts of it without previous written permission by JETI Technische Instrumente GmbH.

September 23, 2016