

MCS2

GETTING STARTED GUIDE



www.smaract.com



Copyright © 2018 SmarAct GmbH

Specifications are subject to change without notice. All rights reserved. Reproduction of images, tables or diagrams prohibited.

The information given in this document was carefully checked by our team and is constantly updated. Nevertheless, it is not possible to fully exclude the presence of errors. In order to always get the latest information, please contact our technical sales team.

SmarAct GmbH, Schuette-Lanz-Strasse 9, D-26135 Oldenburg
Phone: +49 (0) 441 - 800879-0, Telefax: +49 (0) 441 - 800879-21
Internet: www.smaract.com, E-Mail: info@smaract.com

Document Version: 1.0.1

GETTING STARTED

This document is a getting started guide for the SmarAct Modular Control System 2 (MCS2). It describes the installation of software and guides the user through the first steps of working with the SmarAct MCS2.

1.1 What Is New?

The SmarAct MCS2 is the follow-up of the MCS controller system. It has several new features and improvements. The following table gives an overview of the new features and the differences to the previous MCS system.

Feature / Component	Description
Trajectory Streaming	Participating positioners can be moved synchronously along a defined trajectory
Command Groups	Grouping several commands to be triggered by software or external trigger (via I/O modules)
"Quiet Mode"	Actuator mode for noise-sensitive applications
PicoScale Support	SmarAct PicoScale laser interferometer can be used as high precision sensor module
Hand Control Module	User-friendly 3.5" touch-display on hand control module (HCM)
Hot-Plugging	Hot-plugging of all external components (sensor module, positioners, hand control module)
Auxiliary I/O	Analog / digital inputs and outputs (via I/O modules)
Auxiliary I/O	Analog inputs may be used as feedback for the control-loop
Auxiliary I/O	Digital input trigger (emergency stop, trajectory streaming synchronization, command group trigger)
Auxiliary I/O	Digital outputs with position compare unit
Control loop	Fast control loop with 50kHz
Control loop	User accessible PID control loop tuning (custom positioner types)
Move Control	Following error detection feature to inform the application if a commanded trajectory cannot be followed by a positioner
API	Property based application programming interface (API)
API	Synchronous and asynchronous property access can be mixed in one session depending on the individual requirements
API	Event notification system
Base Unit	Base unit for position values is pico meters (pm) for linear positioners and nano degree (n°) for rotatory positioners
Rotary Positioners	The position of rotary positioners is given by a signed absolute value instead of the combination of angle and revolution
Referencing	On-the-fly referencing mode without the need to stop or return to the physical reference mark allows to easily determine the reference position of mechanically coupled positioners
Movement	Movement parameters like holdtime, open-loop frequency and amplitude, etc. are set independently via separate properties instead of as explicit parameters of the movement command.
Update	In the field firmware update and feature upgrade system

1.2 Software Installation

The MCS2 software installers contain all software and documentation needed to use the MCS2 and to develop your own software.

Software installers are available for Windows™ (Windows™ 7 or higher) and Linux operating systems. Note that the service and firmware uploader tools are currently only available for Windows™.

The software installers can be found on the software CD or USB flash drive you received with your MCS2 device.

1.2.1 Software Installer

The following descriptions refer to the Windows™ software installer.



NOTICE

Note that administrative privileges on the PC are required to run the software installer.

A configuration wizard guides you through the installation process and allows to select different software components for installation. After starting the installer a dialog informs about changes and updates of the programs and documentation files. The following dialog allows to select which components should be installed:

- Select "**MCS2 Tools and Programs**" to install utilities like the firmware uploader and service tool.
- Select "**MCS2 Documentation**" to install the documentation files like user manuals and programmers guide.
- Select "**Support for MCS2 with USB Interface**" to enable the installation of drivers needed to connect to MCS2 devices with USB interface. If the option is selected the installer will ask for permission to run the Usb-To-Serial driver installer at the end of the installation process. The driver can also be installed manually by running the program "CDMxxxx_Setup.exe" in the "Drivers" folder on the software CD or USB flash drive. Note that USB support is not needed for devices with ethernet interface.
- For developing applications with LabVIEW™ select "**LabVIEW Integration**". If more than one LabVIEW™ version is installed you can choose the version to install the LabVIEW API in one of the next steps. To install for additional LabVIEW™ versions just run the installer again and select another LabVIEW™ version (the other software doesn't have to be installed again). Note that the LabVIEW™ IDE should be closed to let the installer create the VI palettes.
- Select "**C Programming Libraries and Examples**" to install libraries, header files and programming examples for writing your own programs in C or C++ (or other languages that are compatible with the programming libraries).

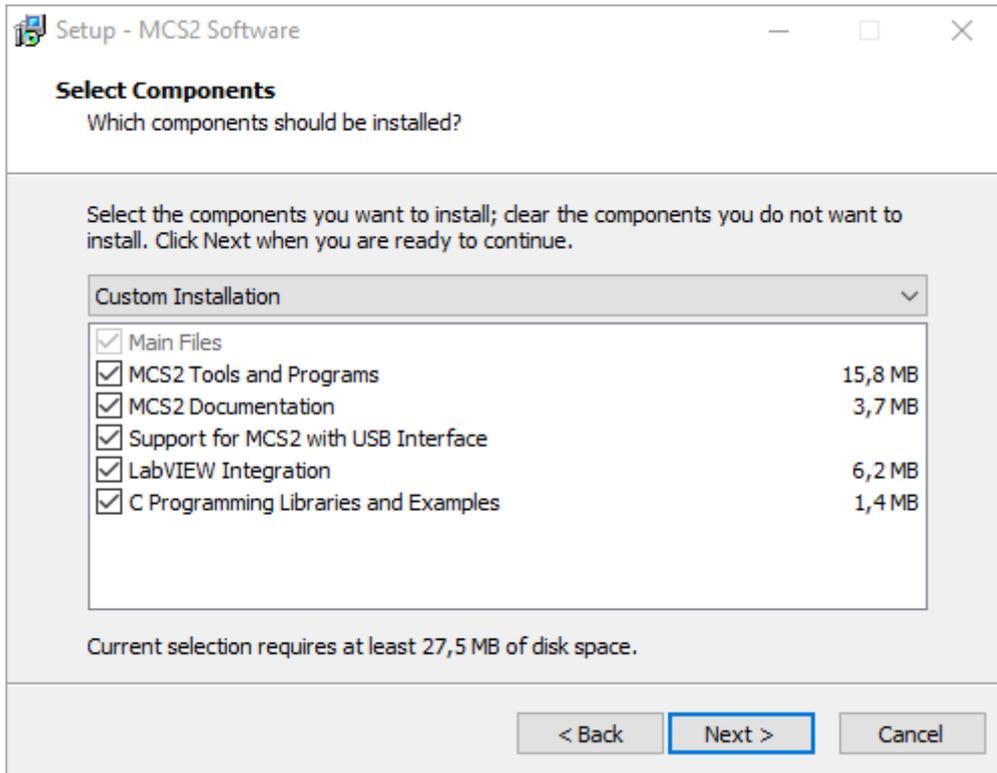


Figure 1.1: MCS2 Software Installer

All files will be installed to the default location: C:/SmarAct/MCS2.

1.2.2 Uninstalling the Software

An uninstaller program can be found in the SmarAct software folder in C:/SmarAct/MCS2/Uninstall. It removes all MCS2 software from your PC. Other SmarAct software is not removed.

1.2.3 Documentation

All documents are installed in C:/SmarAct/MCS2/Documentation. The following documents are available:

Document	Description
MCS2UserManual.pdf	The user manual contains safety notes for the operation of the MCS2. It gives a product overview of the different main controllers and available modules. Furthermore the technical and electrical specifications and connector pin assignments can be found here.
MCS2ProgrammersGuide.pdf	The programmers guide mainly describes the application programming interface (API) used to develop control applications for the MCS2. But it also supplies background information and explains general concepts of the MCS2. Therefore it may be of interest for non-programmers too.
MCS2ServiceToolManual.pdf	The user manual for the MCS2 service tool.
MCS2FirmwareUpdateGuide.pdf	A manual for updating the firmware of a MCS2 controller.
MCS2HCMUserManual.pdf	The user manual for the MCS2 hand control module (HCM).
MCS2PositionerTypes.pdf	This document lists all currently supported positioner types for the MCS2 controller. A cross-reference allows to find the correct positioner type according to the SmarAct positioner series or sensor type.
SmarActNetConfigManual.pdf	A user manual for the SmarAct network configuration tool.

1.2.4 Software Tools

Software tools for the MCS2 are installed in C:/SmarAct/MCS2/Programs.
The following tools are available:

Program	Description
MCS2ServiceTool	The MCS2 service tool may be used to configure MCS2 devices. The tool also shows device information like firmware versions, etc. and may be used to perform automatic diagnostic routines.
SmarActFirmwareUploader	The firmware uploader tool allows customers to update the firmware of a device to apply bug fixes and feature upgrades.
SmarActNetConfig	The network configuration tool allows to configure SmarAct devices with ethernet interface. The device discovery may be used to find the IP addresses of devices in the network.

1.3 Setup and Configuration

1.3.1 Setting up the Device

Before initial operation be sure to read the safety notes in the first chapter of the "MCS2 User Manual". The user manual also gives a step-by-step guide to set up the device.

While devices with USB interface do not need any interface configuration, the ethernet interface must be configured to match the users network settings. The configuration of the network parameters is described in the "MCS2 User Manual".

The following figure shows the structural setup of a typical MCS2 system.

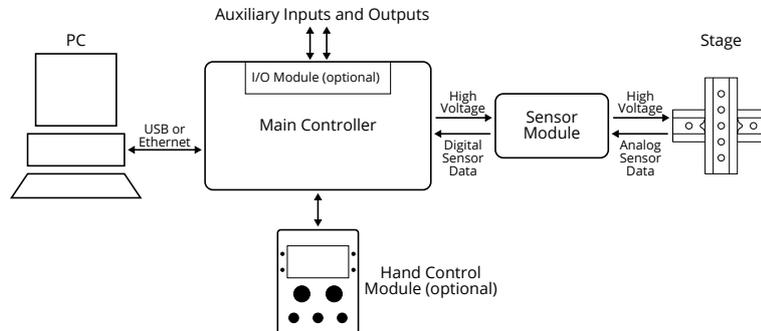


Figure 1.2: Structural Setup of an MCS2 Device

Note that in contrast to previous SmarAct controller systems the MCS2 supports hot-plugging of all external components like the sensor modules, the hand control module and the positioners.

1.3.2 Positioner Type Configuration

During the configuration of the device each channel must be configured with the type of positioner that is connected to the channel. The **positioner type** implicitly gives the controller information about how to calculate positions, handle the referencing, configure the control-loop, etc.

While the positioner type is usually configured as part of the factory end-test of the system it may be necessary to reconfigure it in some cases. E.g. a firmware update resets the type to a default. Changing the physical setup may also make it necessary to update the positioner types.



NOTICE

Note that when the positioner type of a channel is changed, the channel must be calibrated to ensure proper operation of the positioner.

The "MCS2 Service Tool" may be used to configure the positioner types. Please refer to the "MCS2 Positioner Types" document for a list of available positioner types.

1.3.3 Positioner Calibration

Even though every positioner is categorized by its type (which is configured to the channel via the positioner type) each individual positioner may have slightly different characteristics that require the tuning of some internal parameters for correct operation and optimal results. The **calibration sequence** is used to adapt to these characteristics and automatically detects parameters for an individual positioner. It must be executed **once for each channel** if the mechanical setup changes

(different positioners connected to different channels). The calibration data will be saved to non-volatile memory. If the mechanical setup is unchanged, it is not necessary to run the calibration on each power up, but newly connected positioners have to be calibrated in order to ensure proper operation.

The "MCS2 Service Tool" or the MCS2 hand control module may be used to perform this calibration sequence.



NOTICE

Note for **positioners with multiple reference marks**: A special calibration routine must be performed to correct the absolute position calculation when referencing positioners with multiple reference marks. Make sure to execute the "**Detect Dist Code Inversion**" routine of the "MCS2 Service Tool" for these positioners.

Refer to the "MCS2 Service Tool Manual" and "MCS2 HCM User Manual" for more information on the usage and features of the service tool and hand control module.

1.3.4 Firmware Update

The MCS2 controller is equipped with a bootloader system that allows customers to update the firmware of the device to apply bug fixes and feature upgrades. Refer to the "MCS2 Firmware Update Guide" for detailed information about the firmware update process. In order to get the latest firmware please contact the SmarAct technical sales team.

1.3.5 Troubleshooting

In case the MCS2 controller or a SmarAct positioner does not react as expected always check the following steps:

- check all cable connections
- make sure that the correct positioner type is configured for a channel
- perform the calibration sequence

If the calibration generates an error or the unexpected behavior lasts, the "MCS2 Service Tool" offers diagnostic tests to perform device and positioner tests. These tests perform some positioner movements and generate a log file which may be sent to the SmarAct technical support team for further analysis. The service tool also shows hardware and firmware versions and serial numbers of a connected device, which may be requested by the SmarAct support team. Refer to the "MCS2 Service Tool Manual" for more information.

1.4 Developing Software with the MCS2

When starting programming your own software make yourself familiar with the "MCS2 Programmers Guide". The programmers guide supplies some background information for a better understanding of the overall system and covers general concepts of the MCS2. The function and property references describe all available API functions and properties. Every function and property description also includes a short programming example which may be used as a code-template for your own program.

1.4.1 Programming Examples

The fully functional programming examples for C / C++ and LabVIEW™ allow the developer a quick start into the application programming with the MCS2.

Examples are installed in the folders: C:/SmarAct/MCS2/SDK/examples (C/C++) and C:/SmarAct/MCS2/LabVIEW/Examples (LabVIEW).

All examples are designed to build up on each other, this way programming concepts and details are explained step-by-step. Therefore it is recommended to work through the examples starting with the first one.

1.4.2 C/C++ Software Development Kit (SDK)

If the "**C Programming Libraries and Examples**" option in the installer was selected, the software development kit (SDK) is installed in C:/SmarAct/MCS2/SDK.

The path of the SDK is defined in the environment variable "MCS2_SDK" which can be used in development tools to find the SDK folder.

The application programming interface (API) consists of the following files:

- "SmarActCTL.lib" library
- "SmarActControl.h" and "SmarActControlConstants.h" header files
- "SmarActCTL.dll" dynamic library
- "SmarActIO.dll" dynamic library
- Programming examples for C/C++

The SmarActCTL dynamic library is available for Windows™ and Linux 32bit/64bit operating systems. The calling convention is *cdecl*.

1.4.3 LabVIEW™ Integration

If the "LabVIEW™ Integration" was selected in the installer the MCS2 commands are installed in the program folder of the selected LabVIEW™ version and can be dragged directly from a LabVIEW™ functions palette into your program. The "SmarActCTL" command palette can be found in the "User Libraries" menu. The base API functions are located in the top level of the menu while the properties are categorized in the corresponding sub folders of the "Properties" folder.



Figure 1.3: LabVIEW™ Functions Palettes

Note that the VIs of the "Get" and "Set" properties are colored slightly different to easily distinguish them from each other.

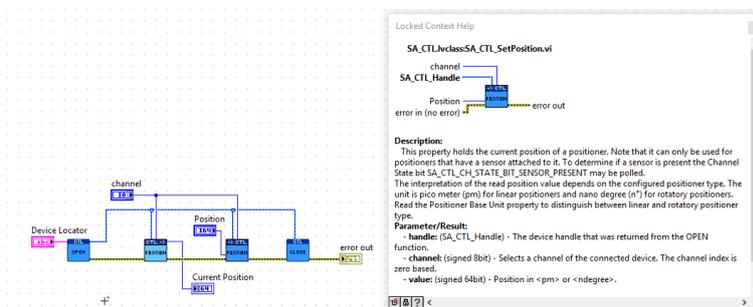


Figure 1.4: LabVIEW™ VIs and Context Help

The "Context Help" (the yellow question mark at the top right corner of the IDE) shows a property description for each VI and may be used as a quick reference of the function details and valid

ranges of property parameters etc.



NOTICE

While many details are given in the programming examples and the context help of the VIs the "MCS2 Programmers Guide" should be the first reference for the programming of the MCS2.

Sales partner / Contacts

Headquarters

SmarAct GmbH

Schuetten-Lanz-Strasse 9
26135 Oldenburg
Germany

T: +49 441 – 800 87 90
Email: info@smaract.com
www.smaract.com

France

SmarAct GmbH

Schuetten-Lanz-Strasse 9
26135 Oldenburg
Germany

T: +49 441 – 80 08 79 956
Email: nicoul@smaract.com
www.smaract.com

Israel

Trico Israel Ltd.

P.O.Box 6172
46150 Herzeliya
Israel

T: +972 9 – 950 60 74

www.trico.co.il

Japan

Physix Technology Inc.

Ichikawa-Business-Plaza
4-2-5 Minami-yawata,
Ichikawa-shi
272-0023 Chiba
Japan

T/F: +81 47 – 370 86 00
Email: info@physix-tech.com
www.physix-tech.com

South Korea

SEUM Tronics

Room 502, 534 Seobusaet-gil
Geumcheon-Gu
08505 Seoul
Korea

T: +82 2 868 – 10 02
Email: hslee@seumtronics.com
www.seumtronics.com

USA

SmarAct Inc.

2140 Shattuck Ave., Suite 1103
94704 Berkeley, CA
United States of America

T: +1 415 – 766 90 06
Email: info@smaract.com
www.smaract.com